


МОНТАЖ
FITTING
MONTAGE



Vertikal Standart/Slope

Bitte nur beiliegende Schrauben verwenden.
Please use enclosed screws only.
Se servir exclusivement des vis jointes.
Просьба использовать только
приложенные винты.

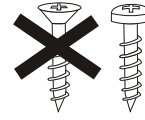

Wichtig! Bitte aufbewahren.











Important! Please keep together.

Important! Veuillez conserver.

Важное указание!
Просьба хранить!

Montage • Fitting • Montage • Монтаж

Wand

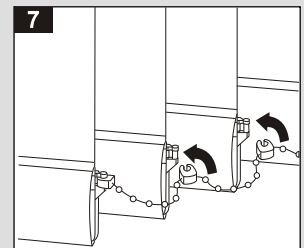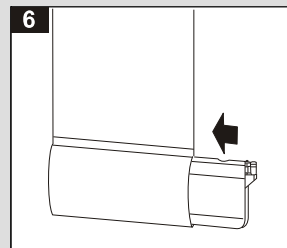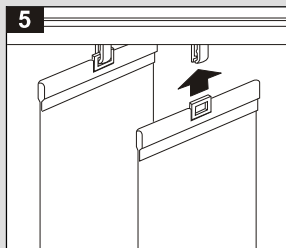
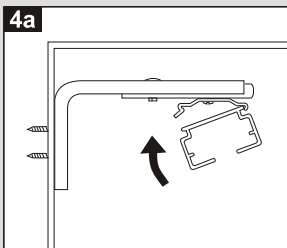
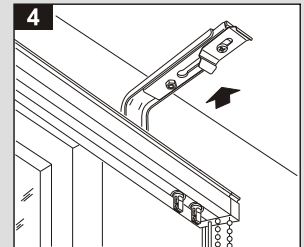
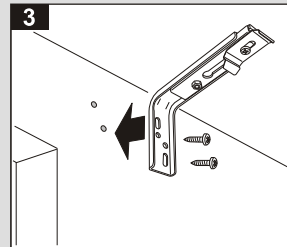
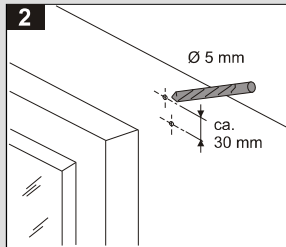
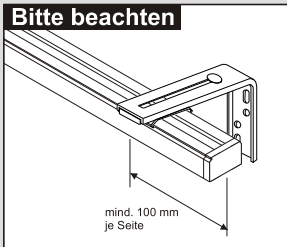
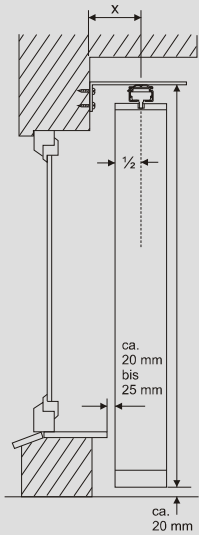
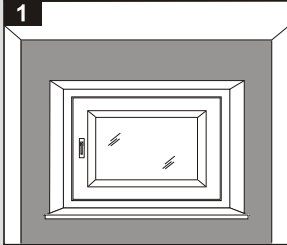


127er Lamelle


X = Fensterbanküberstand
+ 20 mm + 63,5 mm

89er Lamelle

X = Fensterbanküberstand
+ 25 mm + 44,5 mm

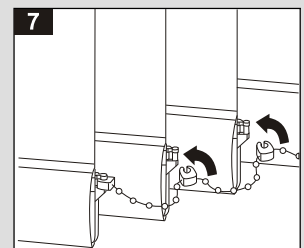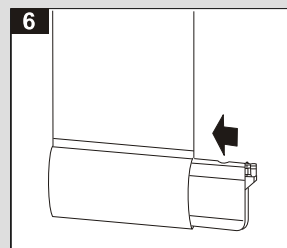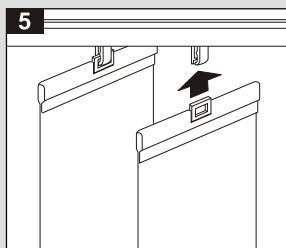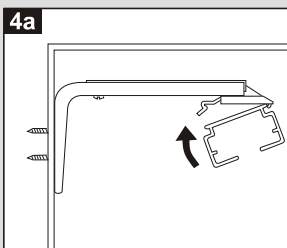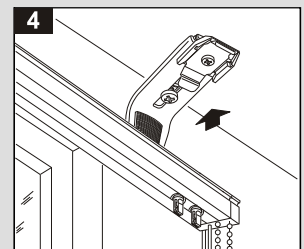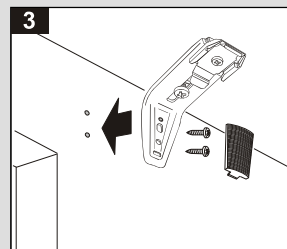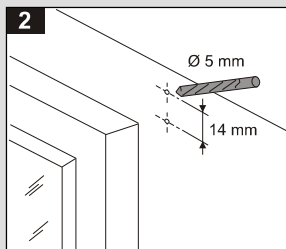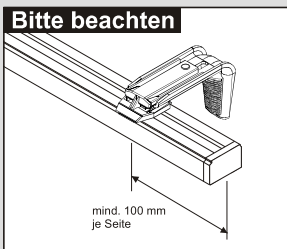

Decke

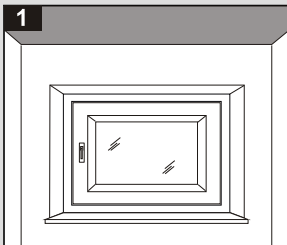


DER SONNENSCHUTZ



Vertikal Standart/Slope

Bitte nur beiliegende Schrauben verwenden.
Please use enclosed screws only.
Se servir exclusivement des vis jointes.
Просьба использовать только
приложенные винты.



Wichtig! Bitte aufbewahren.

Important! Please keep together.

Important! Veuillez conserver.

Важное указание!
Просьба хранить!

127er Lamelle
X = Fensterbanküberstand + 20 mm + 63,5 mm

89er Lamelle
X = Fensterbanküberstand + 25 mm + 44,5 mm

Bitte beachten
mind. 100 mm je Seite

2
Ø 5 mm

3

4

4a

5

6

7

Demontage • Disassembly • Démontage • Демонтаж

1

2

3

4

Reinigung Fenster

1

2

3

4

5
Klick